


Polaris RDS Wiring Diagram

Laptop Computer with Rig Supplied Internet Connection

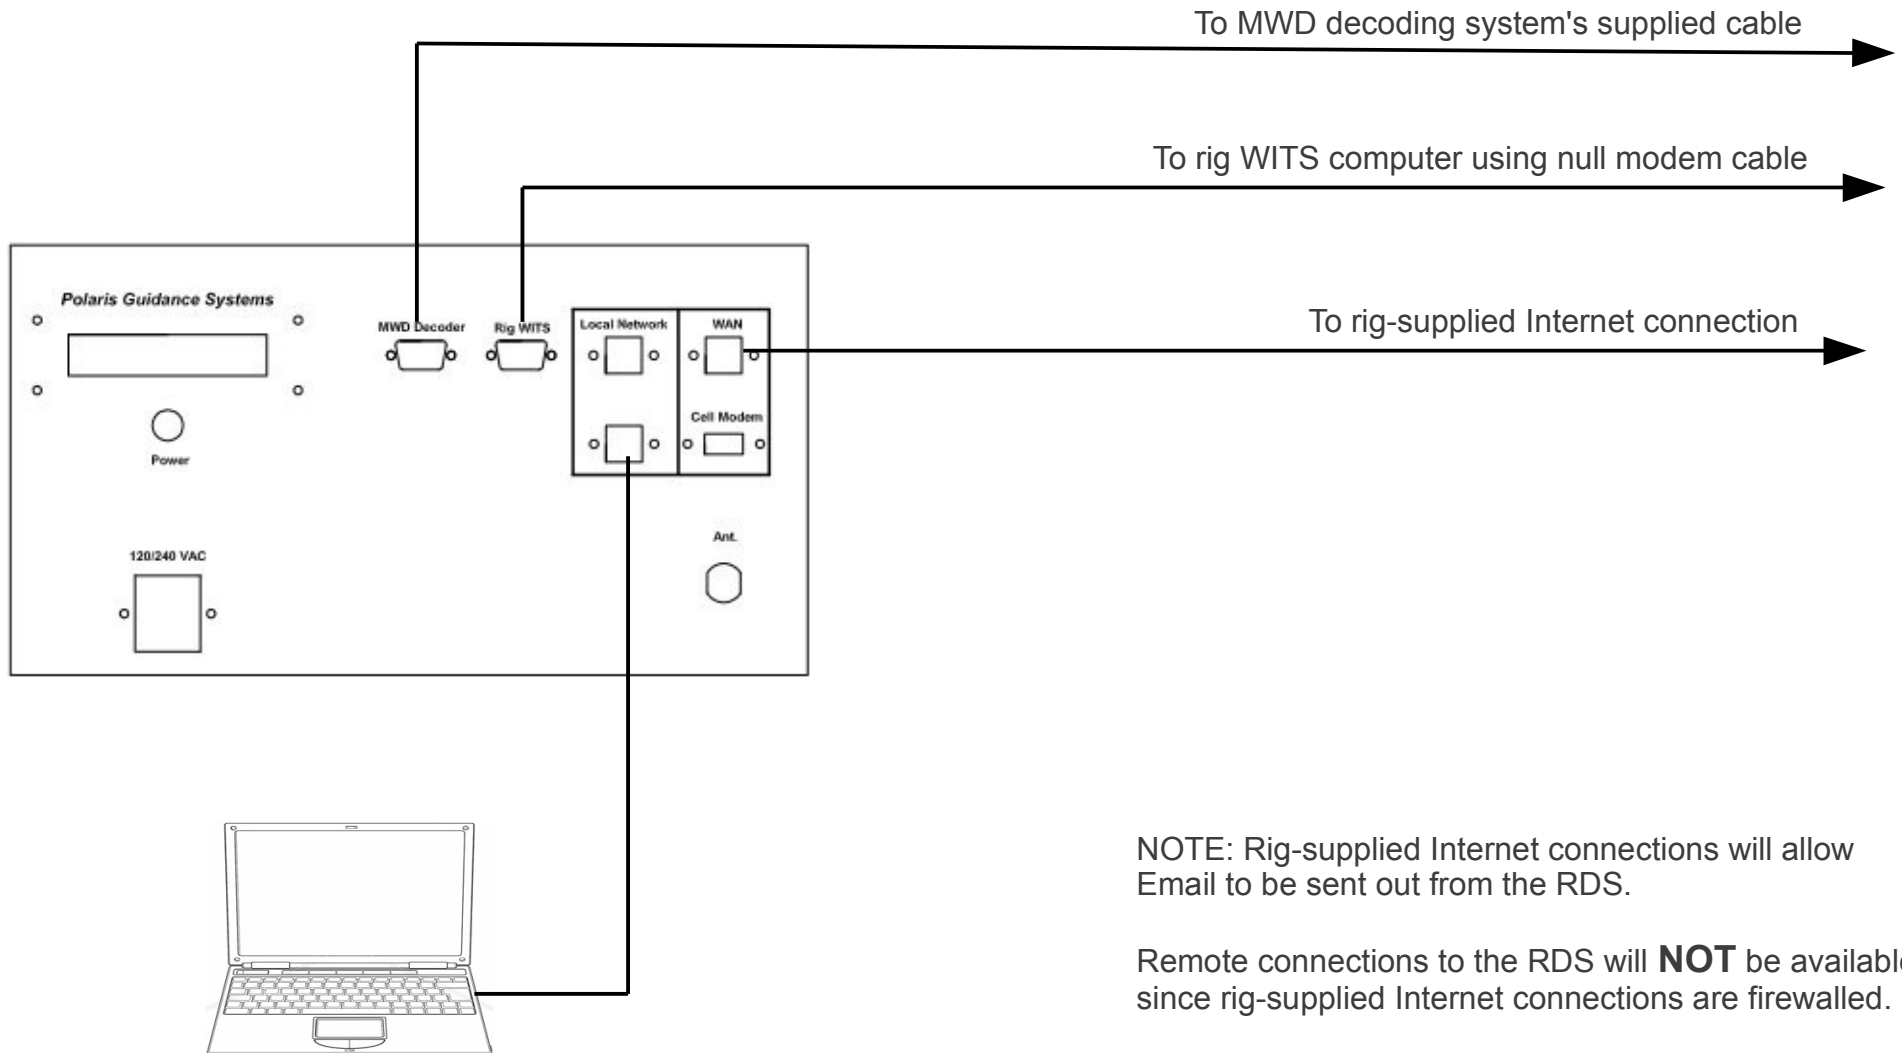


NOTE: Rig-supplied Internet connections will allow Email to be sent out from the RDS.

Remote connections to the RDS will **NOT** be available since rig-supplied Internet connections are firewalled.

Laptop Ethernet adapter settings should be DHCP or automatic. Wireless should be disabled so it doesn't interfere with Ethernet communications.

Polaris RDS Wiring Diagram


Multiple Laptop Computers

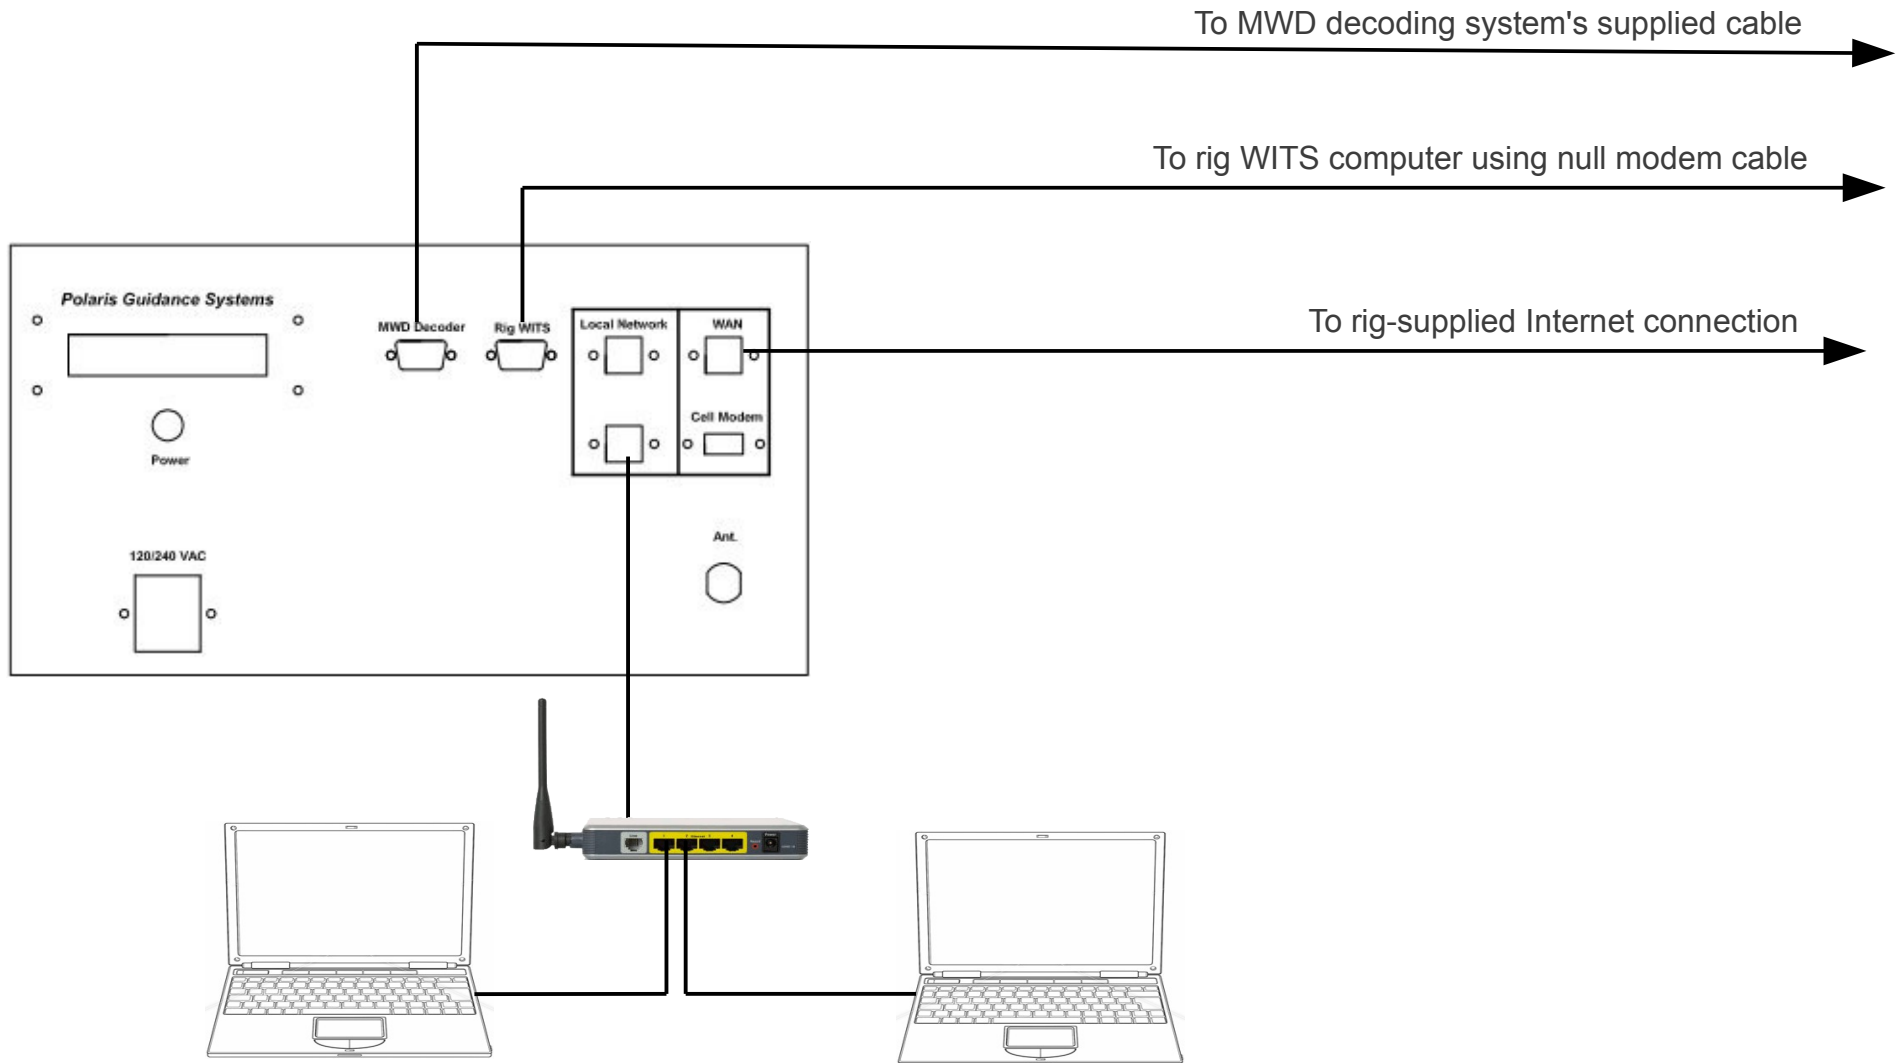

Laptop Ethernet adapter settings should be DHCP or automatic. Wireless should be disabled so it doesn't interfere with Ethernet communications.

Polaris RDS Wiring Diagram

Laptop Computer with Satellite Dish

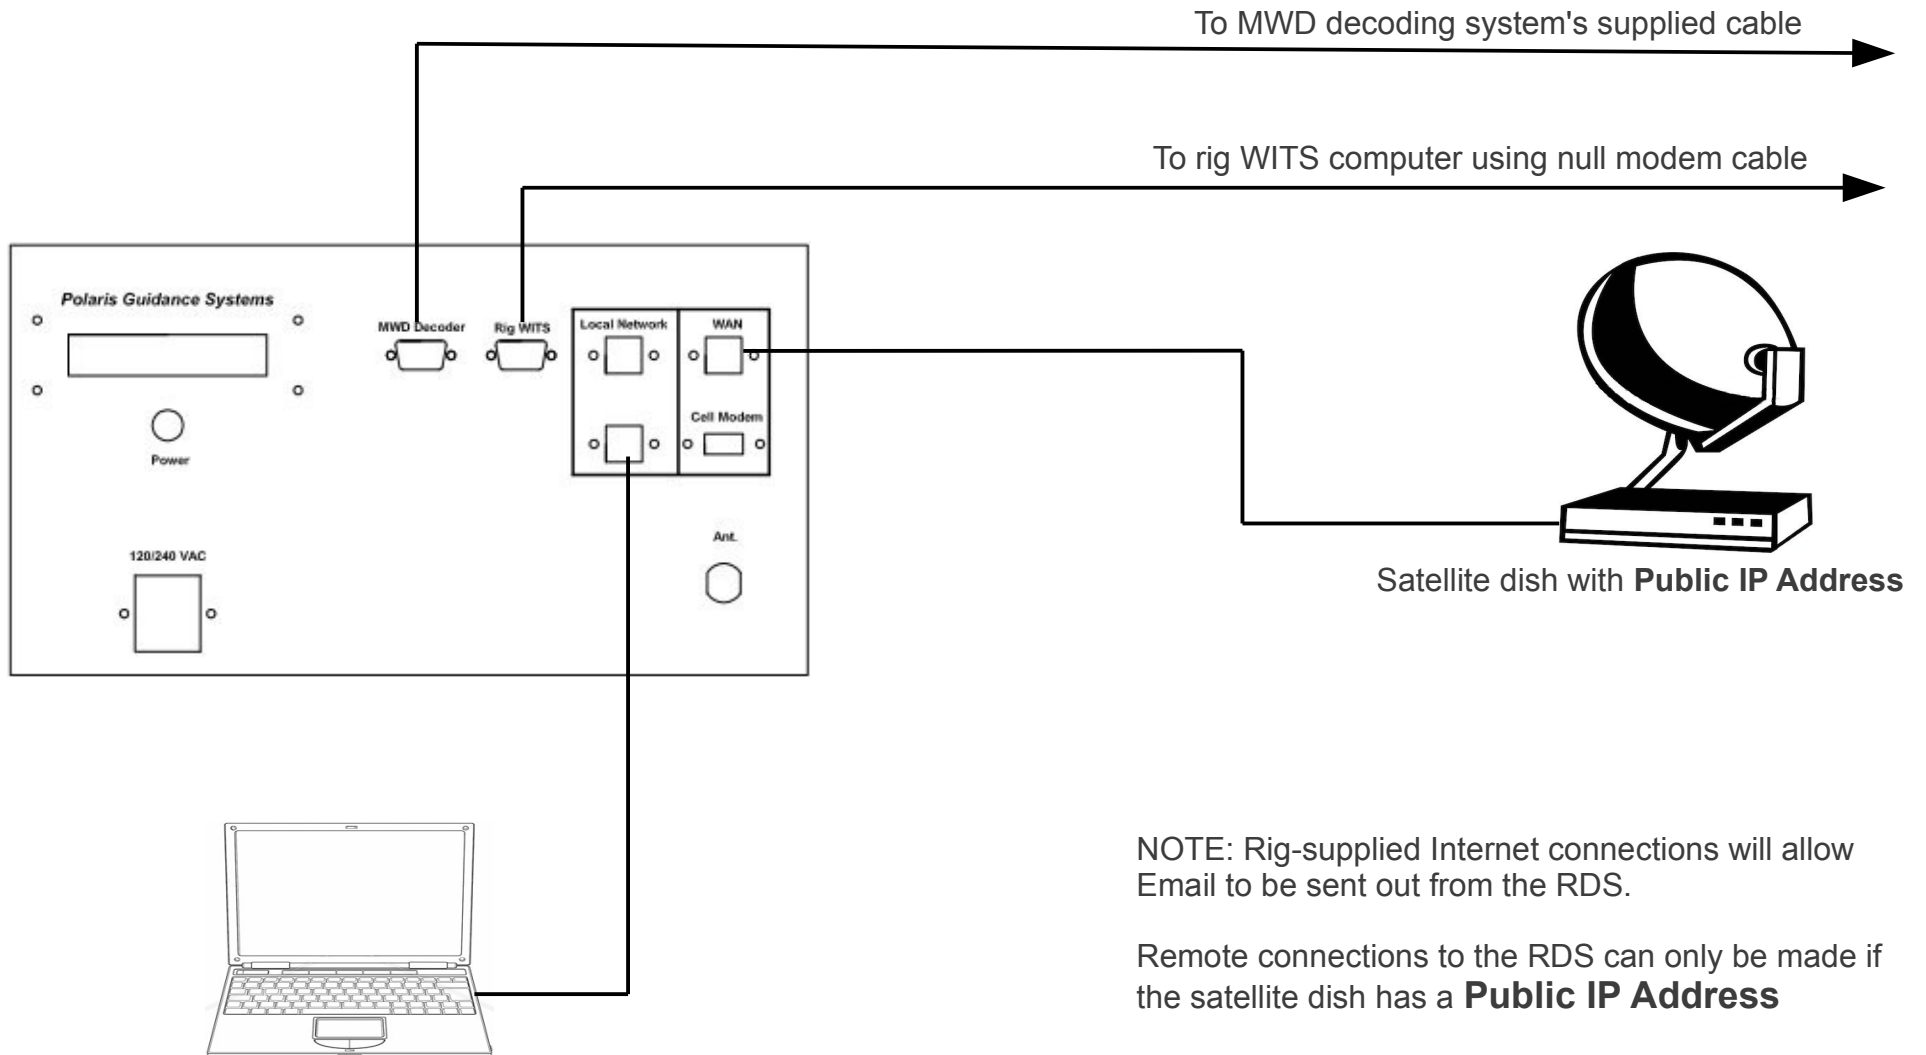

Laptop Ethernet adapter settings should be DHCP or automatic. Wireless should be disabled so it doesn't interfere with Ethernet communications.

NOTE: Rig-supplied Internet connections will allow Email to be sent out from the RDS.

Remote connections to the RDS can only be made if the satellite dish has a **Public IP Address**

Please contact your satellite provider and ask for a Public IP Address