


# Tool Run Time

The Polaris logging system will keep track of the time that the tool is operating by observing the pipe pressure WITS ID (0121) value received from the rig monitoring system. While the pumps are off the timer stops. When the pumps are running the timer starts.

The WITS ID for “Tool Run Time” is 0010 and is automatically created and maintained by the system.

To reset the timer:

1. Go to the **Configuration** section and open the “**WITS IDs**” tab
2. Edit the WITS ID **0010** and enter “**0**” in the “**Last Value Received**” field

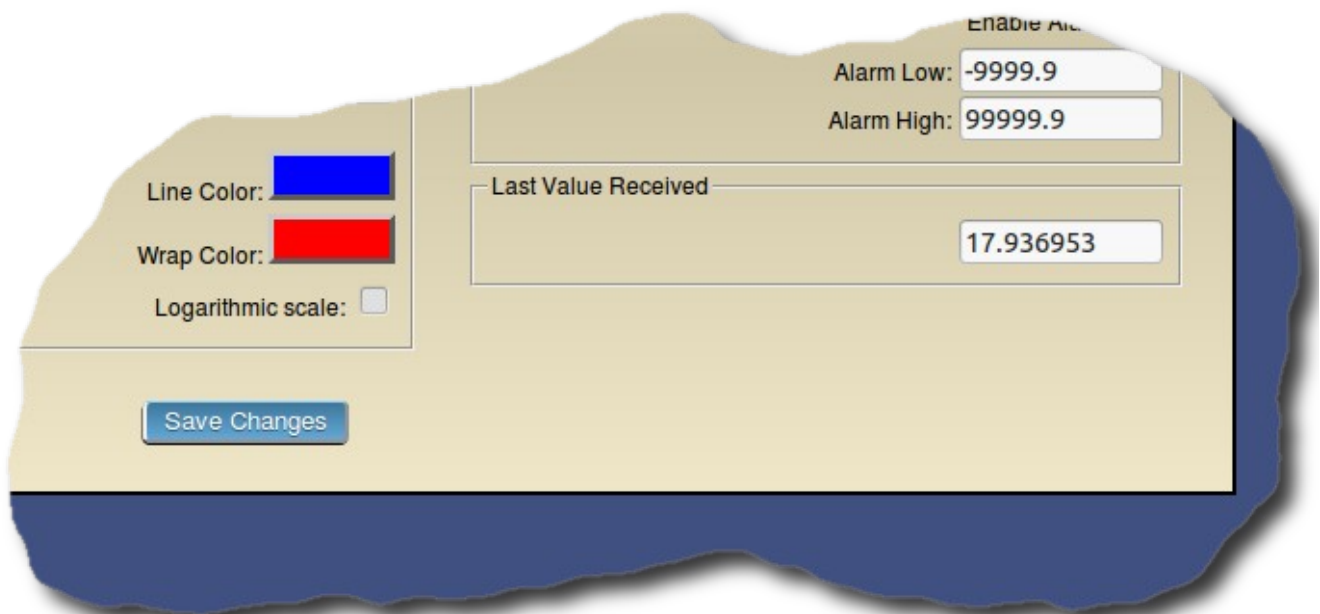

The screenshot shows a configuration window for a WITS ID. On the left, there are color selection options: "Line Color" with a blue swatch and "Wrap Color" with a red swatch. Below these is a "Logarithmic scale" checkbox which is currently unchecked. A "Save Changes" button is located at the bottom left. On the right, there are input fields for "Alarm Low" (set to -9999.9), "Alarm High" (set to 99999.9), and "Last Value Received" (set to 17.936953). A partially visible "Enable Al..." checkbox is at the top right.